

Thank you for your purchase !

How to measure and install the Zebedee® any angle hanging rail.

You will need:

Tape measure
Pencil
Drill (wood drill bit)
Screws, suitable wall plugs

Wooden Lath method (optional):

Wooden Lath – slightly longer than the rail
x 75mm wide Minimum x 10mm thick approx
"No Nails" adhesive
Countersink head

Environmental Statement

The Packaging of Zebedee Hanging Rail has been specifically designed to minimise impact on the environment and is 95% recyclable with the minimum use of plastic. Please help in our quest to be environmentally friendly by recycling as much as possible.

The Legal Bit

The Zebedee Hanging Rail is protected by Intellectual Property Laws and the name and logo are Registered Trademarks and are protected therein.

Any attempt to illegally produce or assimilate any part of the design or Trademark, will be met with the full force of the Law.



contact us

Call us: 0845 299 3532

Email us: hello@zebedee.co

Visit us: www.zebedee.co



Fitting Instructions

Easy as 1,2,3

Step 1

How to measure:

Zebedee comes in five sizes


500mm, 600mm, 700mm, 800mm and 900mm.

The length of the rail is the total length of the Zebedee including the brackets.

The brackets are designed to sit back to back to combine different lengths of Zebedee. So a 2000mm space, for instance, can be covered by 2 x 900mm rails.

The brackets protrude 7cm and use two screws each.

If fitting into an alcove or wardrobe, it is crucial that allowance is made at the top for the protrusion of the bracket and access room for a screw driver.

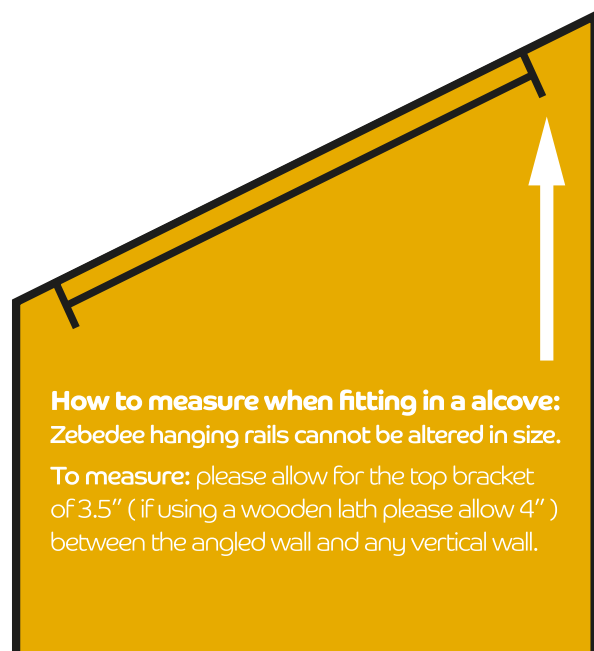

Step 2

The fitting of Zebedee is crucial:

Zebedee brackets come complete with screws suitable for fitting directly into a wooden support.

The easiest method is to fit the brackets to a wooden lath first on a flat surface, using the Zebedee rail as a template.

A wooden lath is advised if fitting into a void ceiling – where specialist plugs are required, as it allows for the Zebedee rail loaded weight to be shared by multi points of support.

Ideally, leave half a coat hanger width of around 25cm between the Zebedee rail and the back wall. Zebedee can be placed nearer though – as the hangers angle naturally making Zebedee suitable for narrow wardrobe areas.



Zebedee can be fitted by anyone with reasonable DIY skills.

However if you have any doubt please consult a professional

Step 3

Fitting the brackets:

First, securely fit the bottom bracket to the lath or previously screwed holes or directly into a wooden rafter support.

Rest the end nut of the hanging rail into the round section of the bottom bracket, and holding the rail in place (using it as a template), position and mark the top bracket.

Remove the rail and loosely fit the top bracket. Replace the rail and tighten the screws! Job done!

If fitting further rails, back to back the next bracket and repeat!

